

## Caseta metálica


Manual de instrucciones

**Referencia: 23004192** 





Se requiere dos personas para el montaje (2-3 horas).

## Tamaño de la caseta:

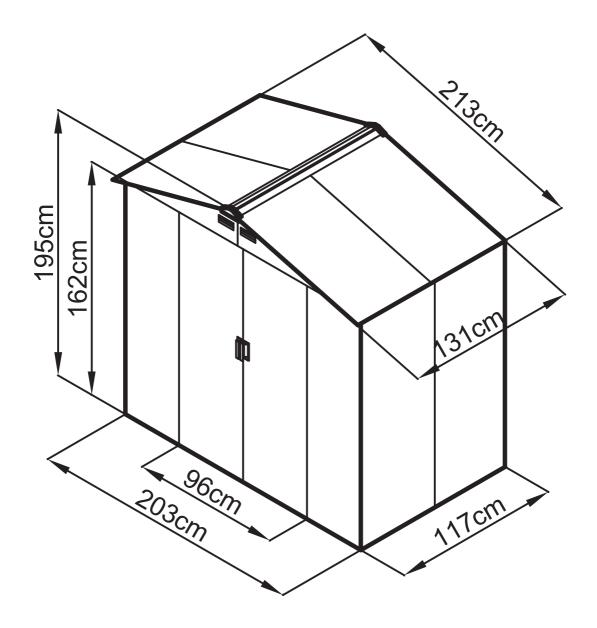

Área requerida para la instalación:

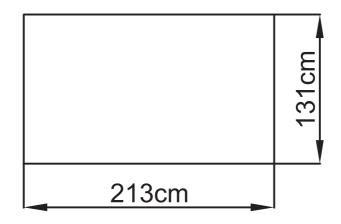

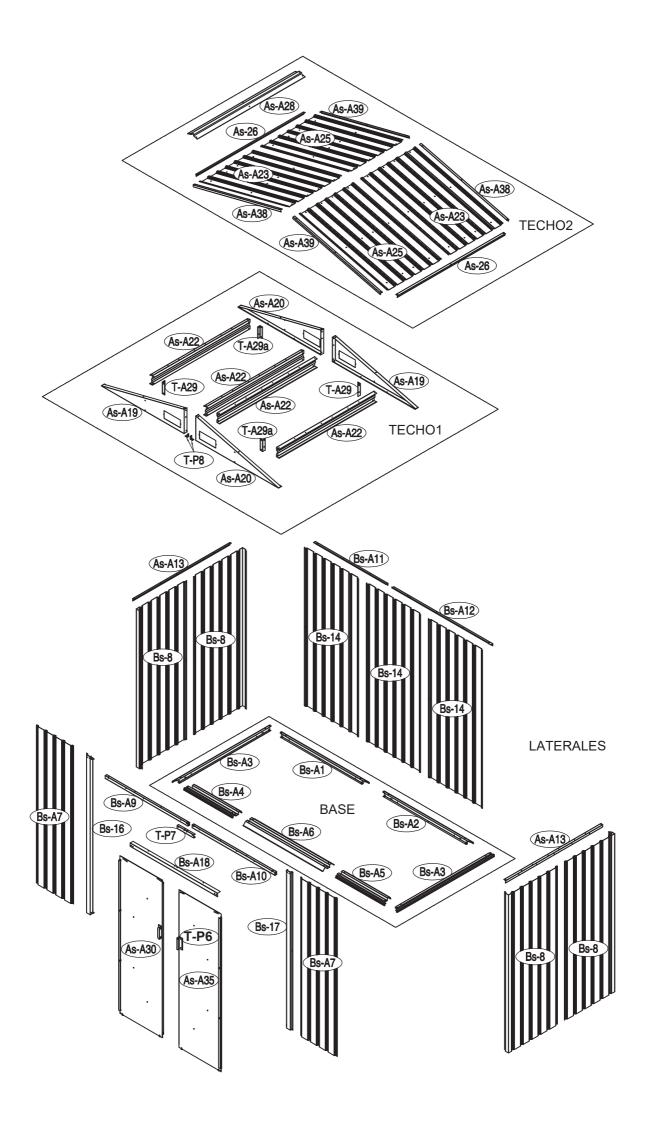

NO.	IMAGEN	mm	QTY		NO.	IMAGEN	mm	QTY
BASE				Ts-31		1583	x2	
Bs-A1	<b>-</b> -7-7	1055	х1		Bs-A32		919	x4
Bs-A2		1074	х1		Bs-A33		486	<b>x</b> 1
Bs-A3		1174	x2		Bs-A34		486	x1
Bs-A4	<b>71.</b> 7\	590	x1		Bs-A36		486	x1
Bs-A5		590	х1		Bs-A37		486	х1
Bs-A6	75	958	х1			EXTR	AS	
LATERALES					T-P1			х4
Bs-A7	~~~	1648	x2		T-P2			x4
Bs-8		1648	х4		T-P3	$\otimes$		х4
Bs-14	~~~~	1648	х3		T-P4	Ø		x2
Bs-A9		995	х1		TP5A			х4
Bs-A10		995	х1		T-P6			x2
Bs-A11	٦	873	х1		T-P7		200	<b>x</b> 1
Bs-A12		1190	х1		T-P8	8		x2
As-A13	٦	1168	x2		As-A40	0		x142
Bs-16	7	1648	х1		As-A41	<b>O</b>	ST4x10	x172
Bs-17		1648	х1		As-A42	Comp.	ST4x16	x16
Bs-A18		1044	х1		As-A43	Sample Control of the	M4x10	x66
TECHO1					As-A44	8		x56
As-A19		989	x2					
As-A20		989	x2					
As-A22	3	1174	х4					
T-A29	J	120	x2					
T-A29a		120	x2					
TECHO2								
As-A23		1090	x2		7) 2)			
As-A25		1090	x2					
As-26	٦	1294	x2					
As-A38		1087	x2					
As-A39		1087	x2		1			
As-A28	~~	1298	х1					
PUERTA								
As-A30		1643	х1					
As-A35		1643	х1					

